


Masonry wall restraint

Galvanised masonry restraint strap fixed to minimum 3 joists in accordance with manufacturers recommendations. Use 38 x 0.5 joist depth timber blocking. Do not notch the flanges

Timber noggin fixed vertically between joist webs

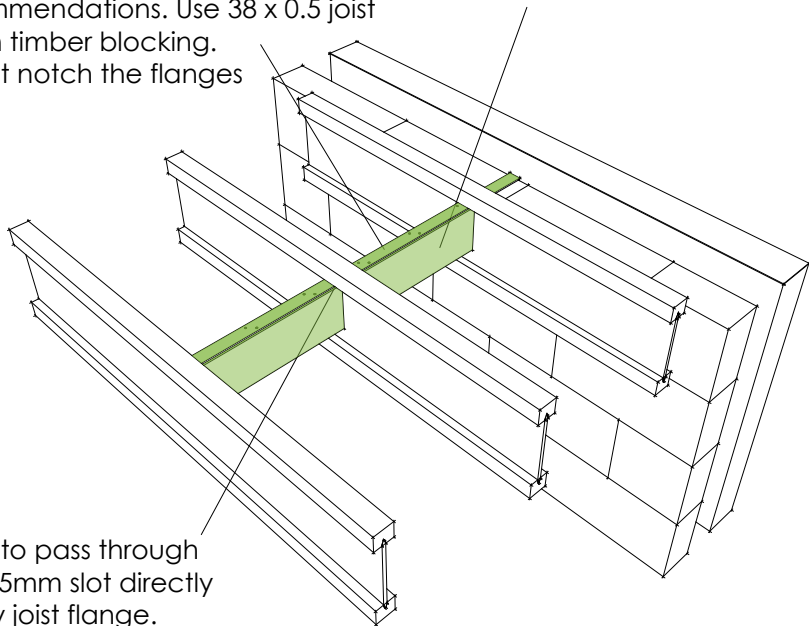

Strap to pass through 40 x 15mm slot directly below joist flange.