


R6

## Birdsmouth cut at eaves

Do not cut beyond the inside face of the bearing

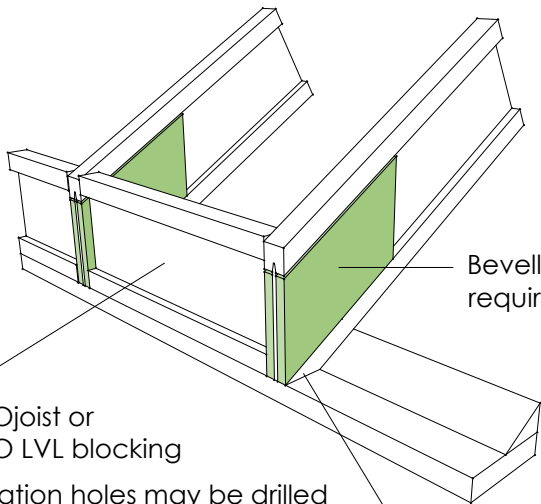

Bevelled web stiffener required both sides

STEICO joist or  
STEICO LVL blocking

Ventilation holes may be drilled  
in the blocking where required

Birdsmouth cut to be checked  
by a qualified engineer